


DCRD-PCV Rev 2 DRILL TEMPLATE and DIMENSIONS
SMALL TACH SWITCHES

BEFORE PRINTING TURN OFF ANY PRINTER SIZE ADJUST SETTING
VERIFY PRINTED HOLE SIZES BEFORE DRILLING

Cut and tape this template on your chassis to use a guide. Re space the connectors and PCB as desired.

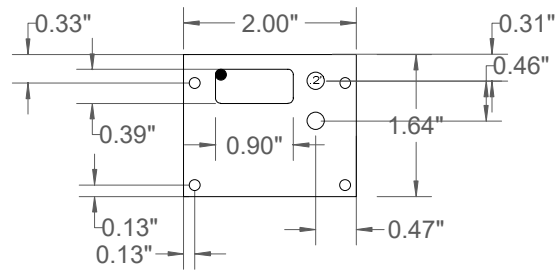

SIDE VIEW

