


**BEFORE PRINTING TURN OFF ANY SIZE ADJUST SETTING ON YOUR PRINTER,
VERIFY PRINTED HOLE SIZES BEFORE DRILLING**

DPM4 DRILL TEMPLATE

Cut and tape this template on your chassis to use a guide.
Re space the connectors and PCB as desired.

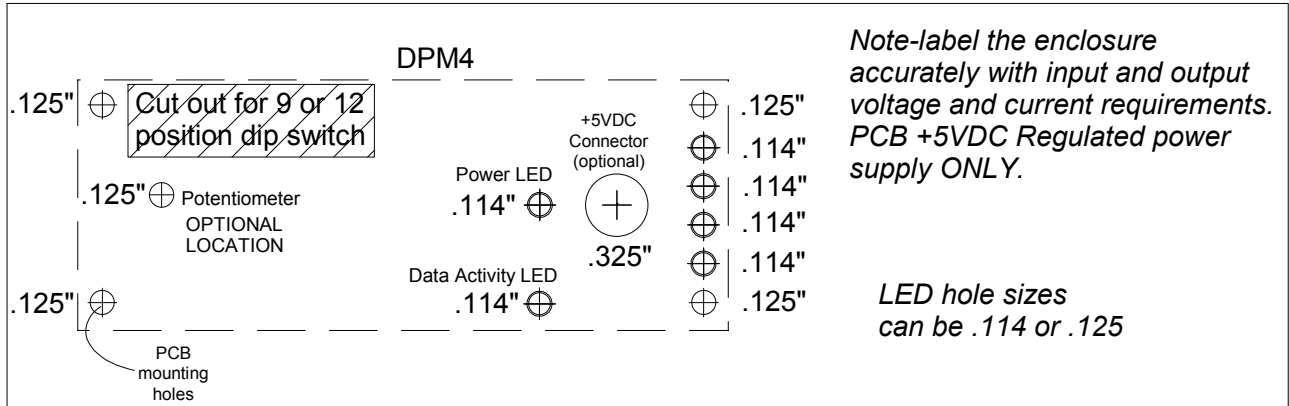

Handle the PCB with static electricity precautions - touch a grounded source to discharge static electricity before touching the PCB

WIRING DIAGRAM Top View

